MOUNTING PROCEDURE


KIT SAVE CARTER DUCATI DIAVEL

DD1101

KIT

- X2. BUSH Ø 10 X2. PVC "HEAD" SAVE CARTER X2. SCREW 10X120 X2. NUT Ø 10
- X2. THICKNESS H 25 X2. THICKNESS H 55
- X4. SPECIFIC BRACKET
 X8. STICKER RUBBER STRIPE

WWW.BARRACUDAMOTO.COM

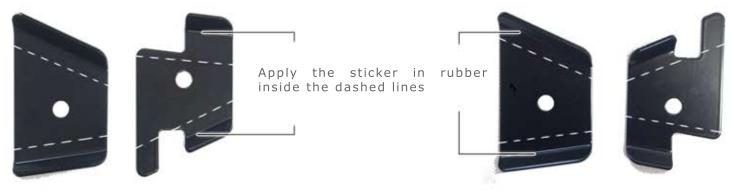

Right Side

Left Side

APPLY THE STICKER RUBBER LINES ON ALL THE BRACKETS TO AVOID THE CONTACTS BETWEEN THE BRACKET AND THE CHASSIS.

FIND THE FIXING POINT TO THE CHASSIS AND MOUNT THE BRACKET LIKE SHOWN IN THE PICTURE



Right Side

Thickness h 25mm



USE THE 25 mm THICKNESS INSIDE THE BRACKETS AND MOUNT THE 55 mm THICKNESS ON THE EXTERNAL SIDE.

Thickness h 55mm

Nut Inside bike

BEFORE START THE MOUNTING PROCEDURE, APPLY THE STICKER RUBBER STRIPES INSIDE THE BRACK-ETS LIKE DESCRIBED INTO THE PICTURE, TO AVOID CONTACTS BETWEEN THE CHASSIS AND THE BRACKETS, TO GUARANTEE A BETTER GRIP. FIX THE KIT LIKE DESCRIBED IN THE PICTURES, FIX THE PVC HEAD OF SAVE CARTER ONLY AFTER MOUNTED AND LOCKED ALL THE KIT.