


MOUNTING PROCEDURE**KIT WINDSHIELD
KAWASAKI ER 6N****KE6300**WWW.BARRACUDAMOTO.COM**KIT**

- X2. BRACKET (1 RIGHT SIDE + 1 LEFT SIDE)
- X4. "ROUND HEAD" SCREW 5X16
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. WASHER DIAMETER 5
- X4. AUTOLOCK NUT DIAMETER 5
- X1. BARRACUDA WINDSHIELD/SCREEN

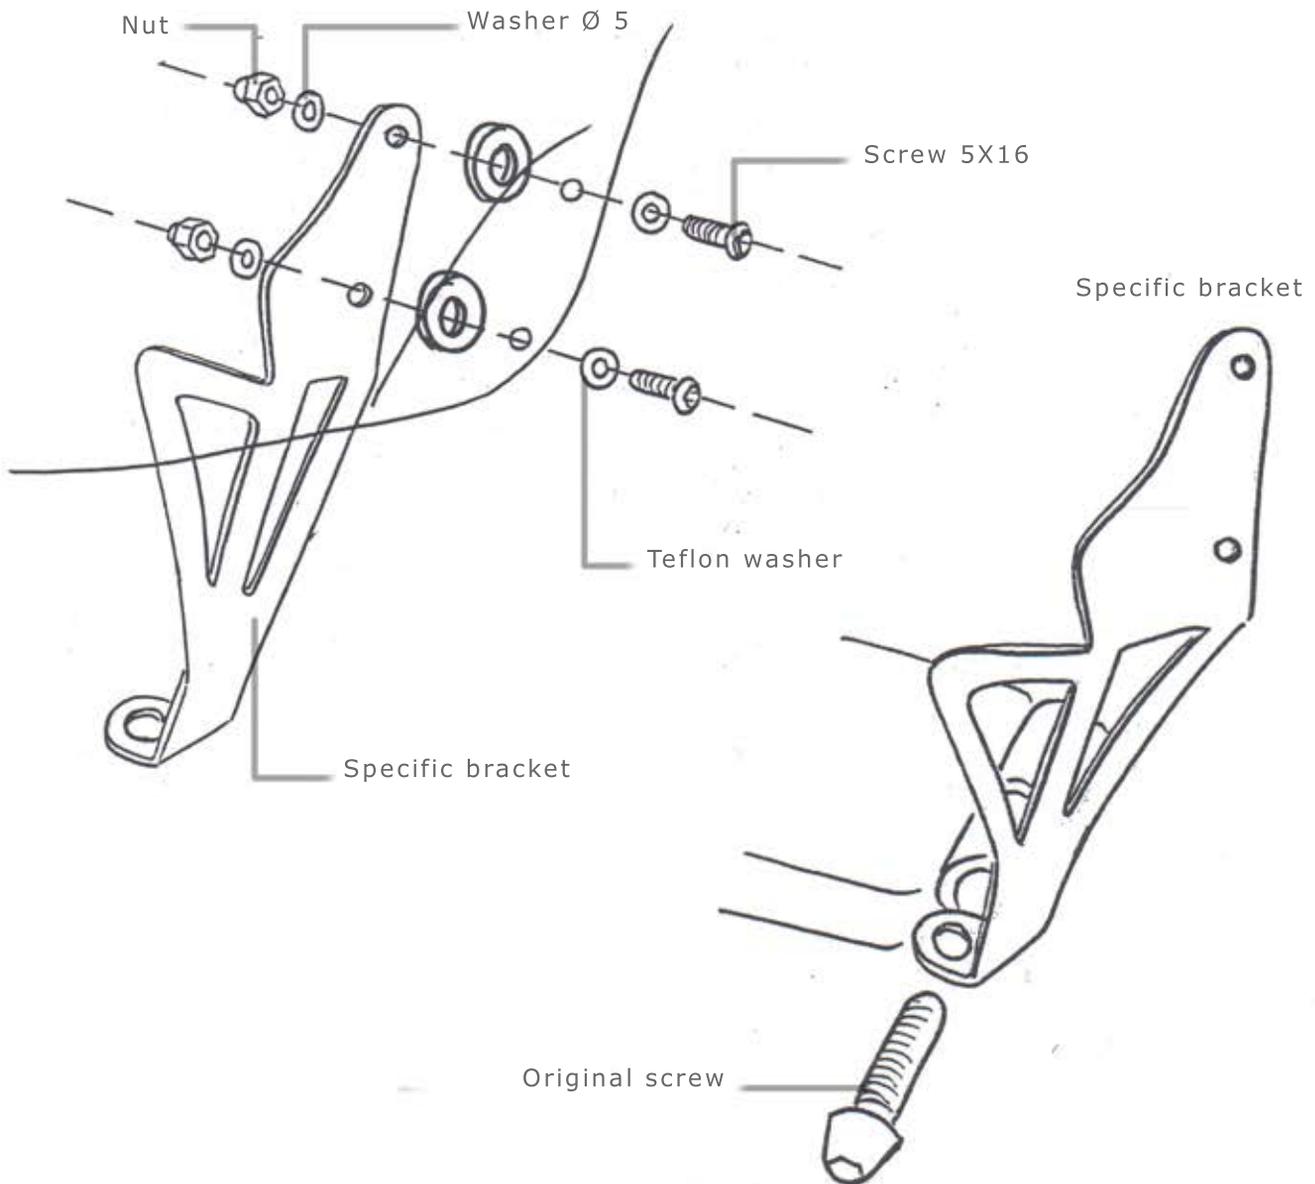

APPLY THE TWO BRACKET ON THE STEERING PLATE USING THE ORIGINAL SCREW. FIX THE WINDSHIELD/SCREEN ON THE TWO BRACKET WITH THE 5X16 SCREW LIKE DESCRIBED INTO THE PICTURES. FOUND THE CORRECT POSITION OF WINDSHIELD/SCREEN, LOCK ALL AND USE THE 4 RUBBER WASHER BETWEEN THE IRON BRACKET AND WINDSHIELD/SCREEN