

MOUNTING PROCEDURE


KIT SAVE CARTER
KAWASAKI Z 1000 '10 - '14

KN1101/10

WWW.BARRACUDAMOTO.COM

KIT

X2. SPACER
X2. BOLT 10X130
X2. PVC HEAD
X2. SAVE CARTER BASE

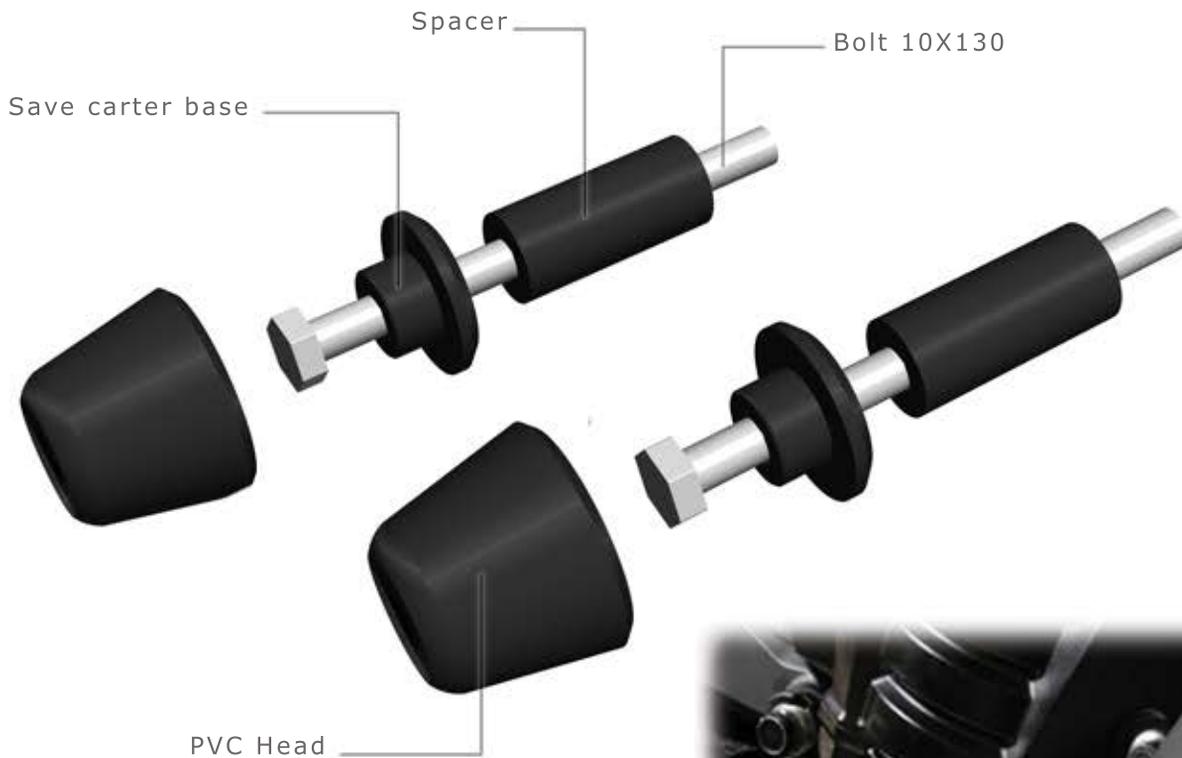

ATTACK POINT ON THE CHASSIS



SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).
FIX THE PVC HEAD AFTER FIXED AND TIGHTENED ALL THE KIT ONLY