

## ASSEMBLING INSTRUCTION

### CRASH PAD KIT


TR6101-21

WWW.BARRACUDAMOTO.COM

## LEGEND

- |   |   |   |
|---|---|---|
| 1. CRASH PAD HEAD<br>TESTA TAMPONE<br>CABEZA CRASH PAD<br>KOPF CRASH PAD<br>TÊTE DE CRASH PAD   | 4. SPACER TUBE H.130<br>DISTANZIALE H.130<br>DISTANCIADOR H.130<br>DISTANZROHR H.130<br>ESPACEUR H.130  | 7. SPACER TUBE H.90<br>DISTANZIALE H.90<br>DISTANCIADOR H.90<br>DISTANZROHR H.90<br>ESPACEUR H.90 |
| 2. BASE PAD<br>BASE TAMPONE<br>BASE DE TOPE<br>STURZPAD BASIS<br>BASE TAMPON  | 5. NUT $\varnothing 10$<br>DADO $\varnothing 10$<br>TUERCA $\varnothing 10$<br>MUTTER $\varnothing 10$<br>ÉCROU $\varnothing 10$                                |   |
| 3. HEX HEAD SCREW M10X200<br>VITE TESTA ESAGONALE M10X200<br>TORNILLO DE CABEZA HEXAGONAL M10X200<br>SECHSKANTSCHRAUBE M10X200<br>VIS À TÊTE HEXAGONALE M10X200 | 6. HEX HEAD SCREW M10X170<br>VITE TESTA ESAGONALE M10X170<br>TORNILLO DE CABEZA HEXAGONAL M10X170<br>SECHSKANTSCHRAUBE M10X170<br>VIS À TÊTE HEXAGONALE M10X170 |   |

LEFT SIDE

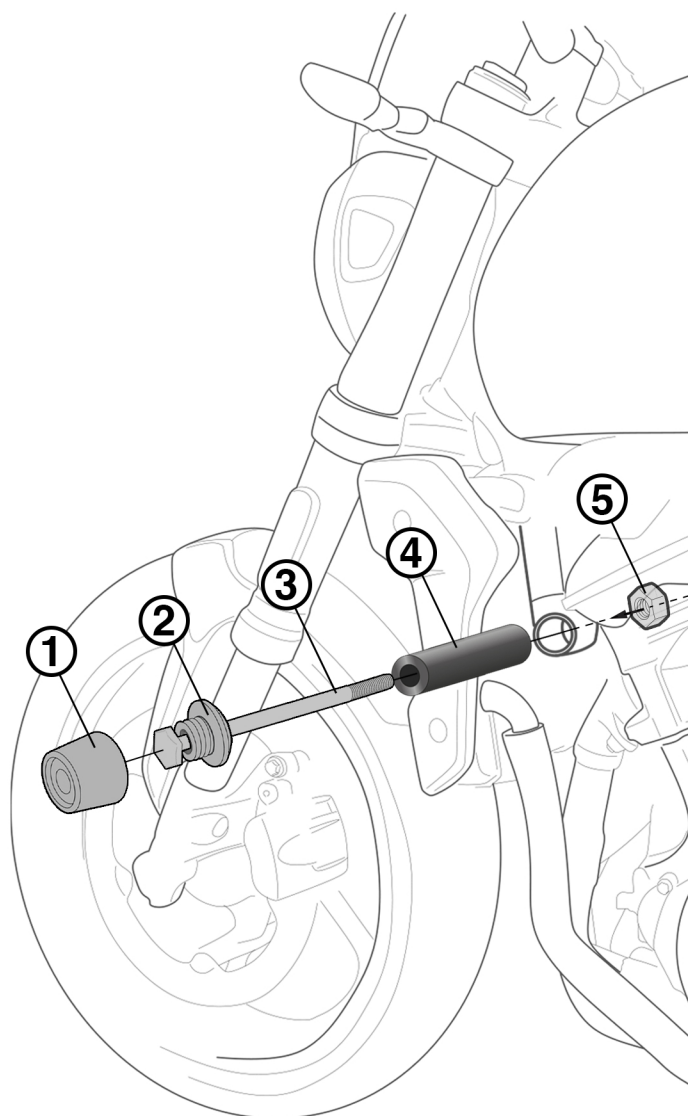

RIGHT SIDE

