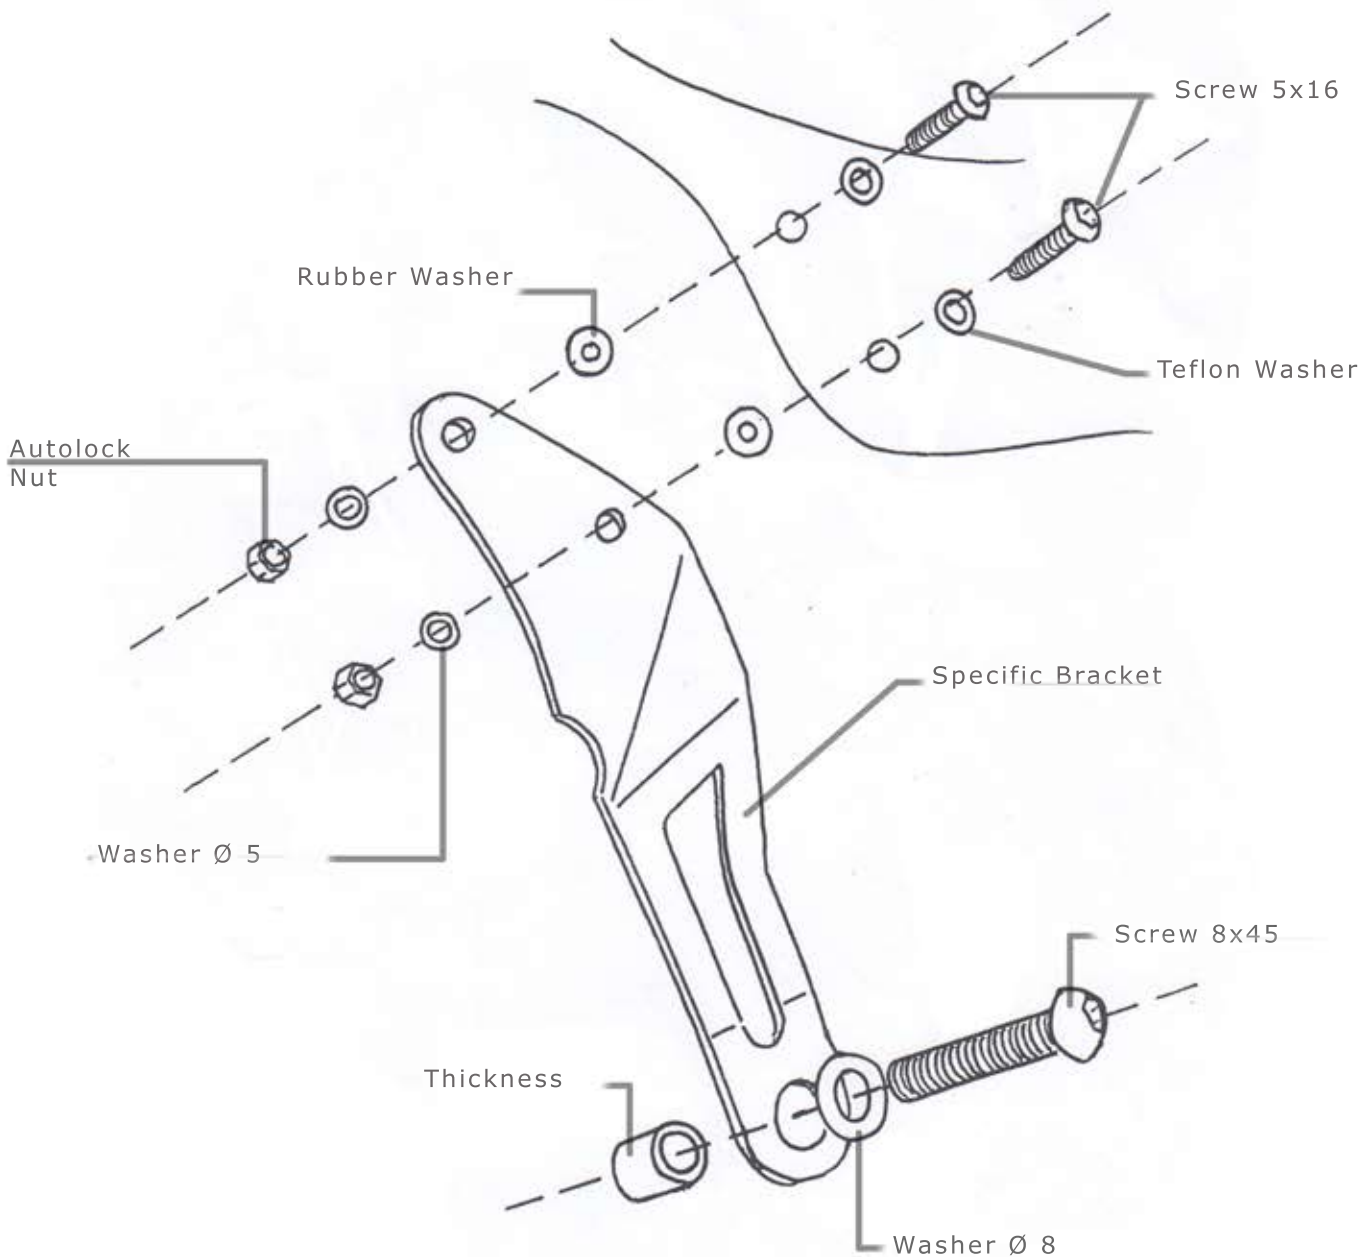


MOUNTING PROCEDURE**KIT WINDSHIELD
YAMAHA MT-03****YMT6300****KIT**

- X2. BRACKET
- X2. "ROUND HEAD" SCREW 8X45
- X2. THICKNESS DIAMETER 13
- X2. WASHER DIAMETER 8
- X4. "ROUND HEAD" SCREW 5X16
- X4. TEFLON WASHER DIAMETER 5
- X4. WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. AUTOLOCK NUT DIAMETER 5

WWW.BARRACUDAMOTO.COM

INSTALL THE WINDSHIELD/SCREEN LIKE DESCRIBED IN THE PICTURE: PUT THE TEFLON WASHERS BETWEEN THE HEAD OF SCREWS AND THE WINDSHIELD/SCREEN.
DON'T LOCK TOO MUCH THE AUTOLOCK NUTS TO AVOID THE PLEXIGLASS DAMAGES.